



TUTORIEL

Envoi de programme dans un USC via une clé USB







Sommaire

Introduction	
Programmation via une clé USB	







INTRODUCTION

Produits concernés	
USC-BX-XX	

Il existe 3 méthodes pour transférer un programme dans un USC, via un câble USB, un câble ethernet et une clé USB.

Nous allons voir le transfert de programme via une clé USB.









PROGRAMMATION VIA UNE CLE USB

Pour envoyer un programme à l'aide d'une clé USB, il faut qu'elle soit formatée en FAT32 (8Go).

Cliquer dans « Outils » puis « USB Action Files Creator »

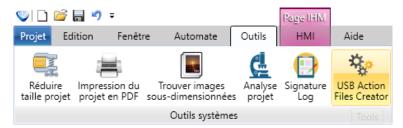

La fenêtre de configuration de la clé USB apparaît :

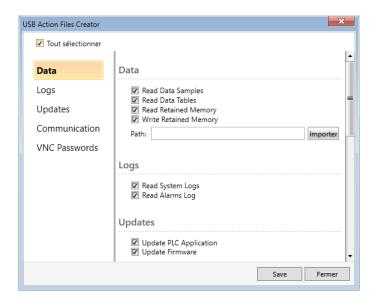

Vous avez la possibilité de mettre à jour le Firmware de l'automate, le programme de l'automate, de forcer au besoin les adresses I.P., etc...


Cocher la case « Update PLC Application » puis cliquer sur « Save ».








Sélectionnez ensuite la clé USB sur votre PC. Le transfert des fichiers débute :

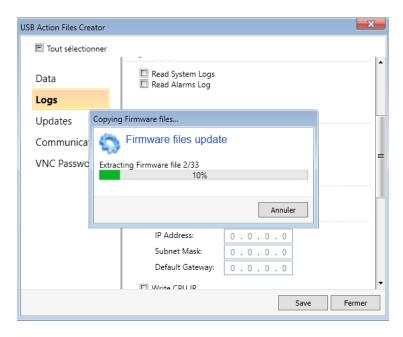

Une fois le transfert terminé, vous pouvez brancher la clé USB sur le port USB Host de l'USC (Numéro 12 du schéma ci-dessous) :

7	Uni-COM™ Jack	Connection port for Uni-COM CB modules*. Shipped covered; leave cover in place when not in use.
8	Ethernet ports	Two ports for Ethernet communications.
9	Input/Output connection points	Model-dependent. Present in models with built-in I/O configurations.
10	I/O Bus connector	(Not shown) Connection point for Uni-I/O™ modules and I/O expansion adapters, shipped covered. Leave covered when not in use.
11	CONFIRM Button	Used to implement and confirm USB Actions.
12	USB Host port	Provides the interface for external USB devices.

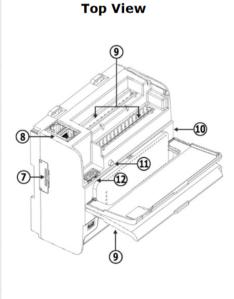









Une fois la clé USB en place, l'USC la détecte avec le fichier de configuration et la LED « USB » s'allume en vert fixe.

Vous pouvez ensuite appuyer sur le bouton « Confirm » (numéro 11 du schéma ci-dessus) pour lancer la procédure de mise à jour, la LED « USB » passe en vert clignotant.

Voici le code couleur des LEDs :

USB Actions Indications	LED, Color & State		tate	
	RUN	ERROR	USB	Indication
				USB drive detected with valid Action file(s) - press
			Green On	CONFIRM ¹²⁾ to start Action
				or
				USB Action finished successfully.
			Green blink	USB Action in progress.
	Green blink		Green On	USB Action requires reset; press CONFIRM to restart system
		Red blink	Green Off	USB drive detected, but contains corrupt Action file(s)
		Red blink	Green ON	USB Action ran with error – disconnect the USB drive to dismiss the error.

Status LEDs	Color & State		Indication		
RUN		On	Run mode		
	Green	Blink	This indication is in conjunction with the USB LED.		
			See table below, USB Actions Indications, for details		
	Orange	On	Start-up mode		
		Blink	Stop mode		
ERROR	Red	On/Blink	The Error LED can give indications in conjunction with the RUN and/ USB LED. See the next tables Error Indications and USB Actions Indications for details		
LICD			21101000010 101 000010		
USB	Green	On	A USB drive is detected that contains valid action file(s). See Error Reference source not found. for details		
	Blink		USB Ac	tion in progress	
BATT. LOW	Red	On	Battery is low or missing		
FORCE	Red	On	I/O Force on		
Error Indications	LED, Color & S		tate		
	RUN	ERROR	USB	Indication	
		Red blink	Off	USB Action has failed – disconnect the USB drive to dismiss the error	
		Red blink		HW Configuration Mismatch – the HWC in the UniLogic application does not match the Uni-I/O modules physically connected to the PLC	
	Orange blink	Red blink		Application Invalid or Version Mismatch (UniLogic version is not supported by device firmware)	
		Red On		Uni-I/O Error (check wiring connections)	
	Orange blink	Red On		OS/Application error	